


1. STARTING & CHARGE SYSTEM


1) BATTERY, IGNITION SWITCH, STARTER MOTOR, GENERATOR CIRCUIT

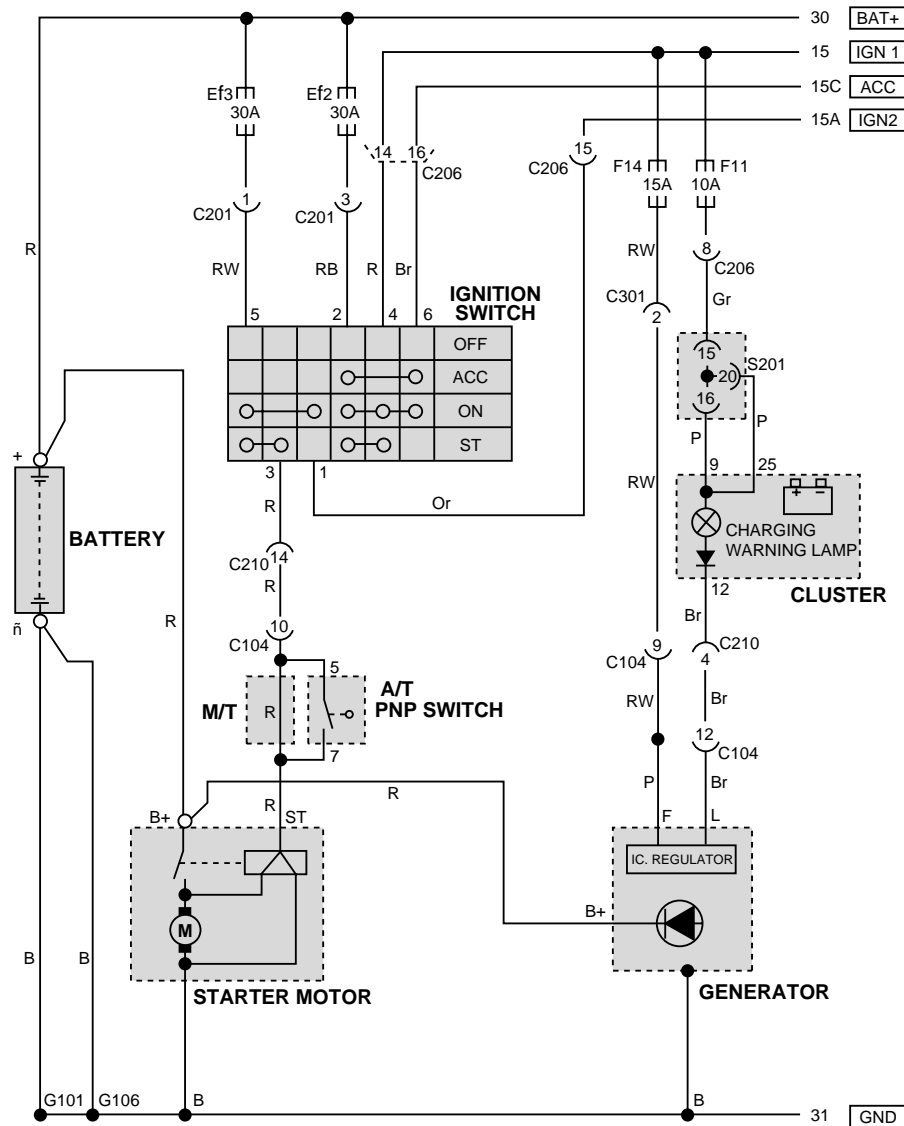

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C201(7PIN, GRAY)	W/H FRONT - IP	Connection Box Next to Passenger Room Fuse Box
C206(20PIN, COLORLESS)	W/H FLOOR - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
S201(20PIN, BLUE)	Splice Pack	Next to Passenger Room Relay Box
G101	W/H Battery Cable	Behind Battery Support Body Ground
G106	W/H Battery Cable	Upper Bolt Of Starter Motor Engine Ground

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

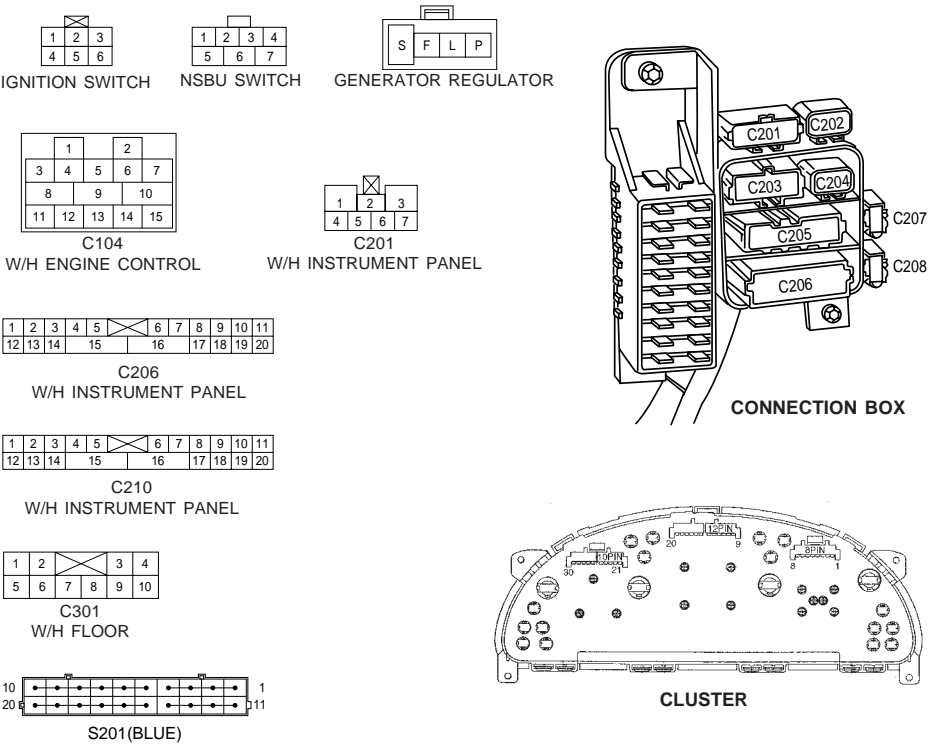


## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

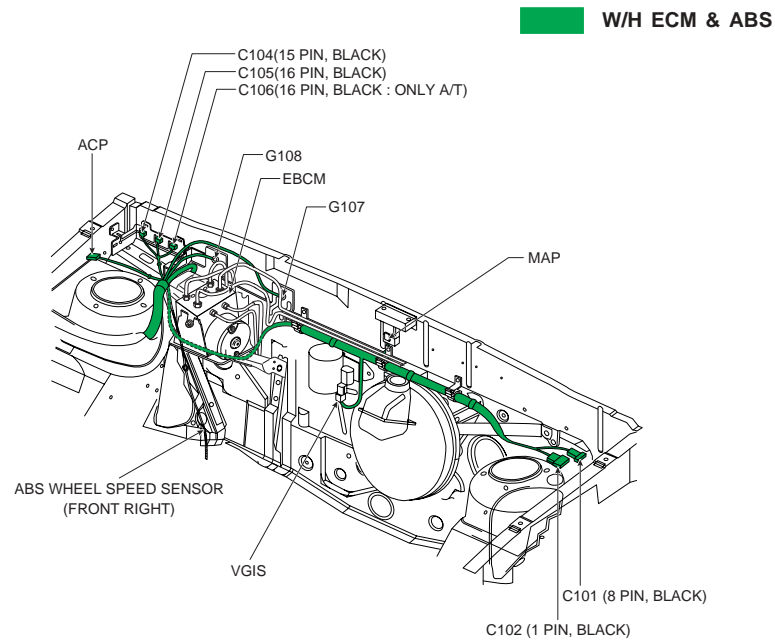

## • PASSENGER ROOM RIGHT SIDE PANEL

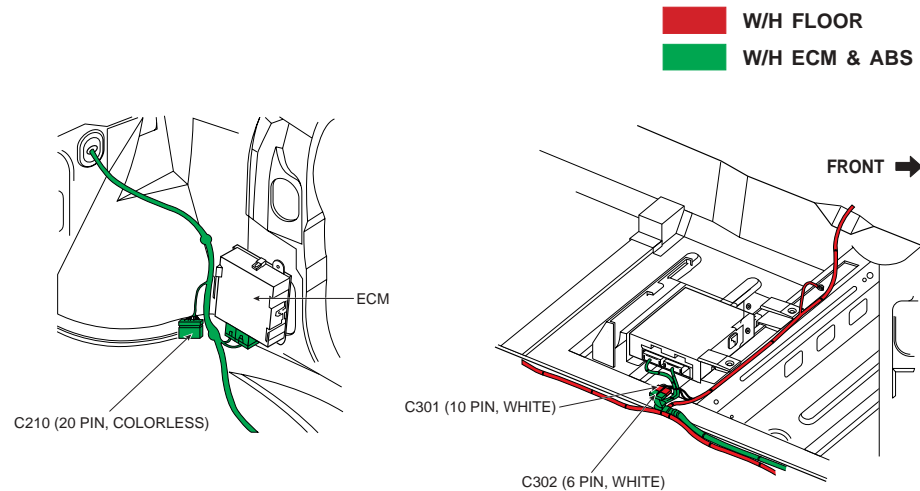


## • DOHC ENGINE

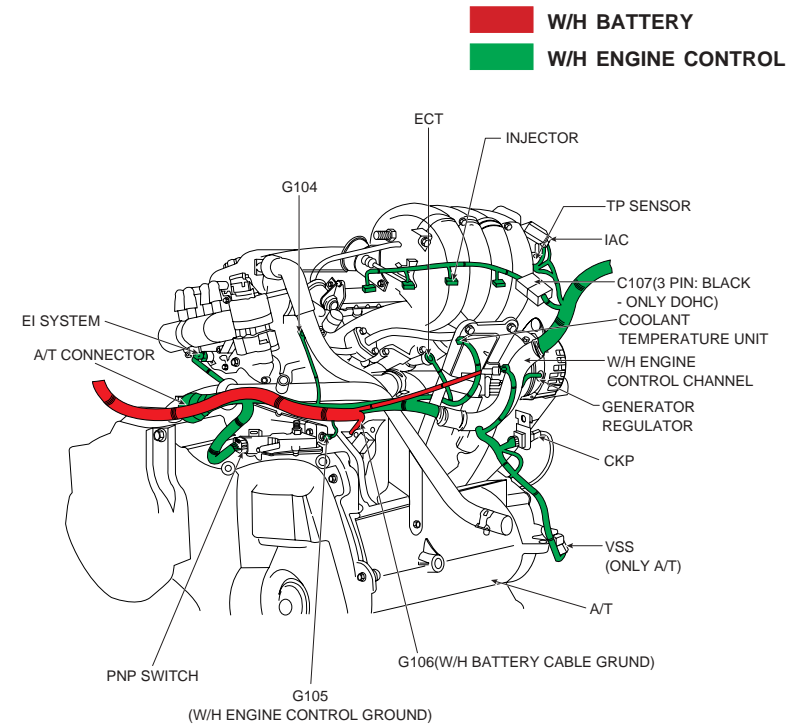


## d. SPLICE PACK

## S201(BLUE) - LHD

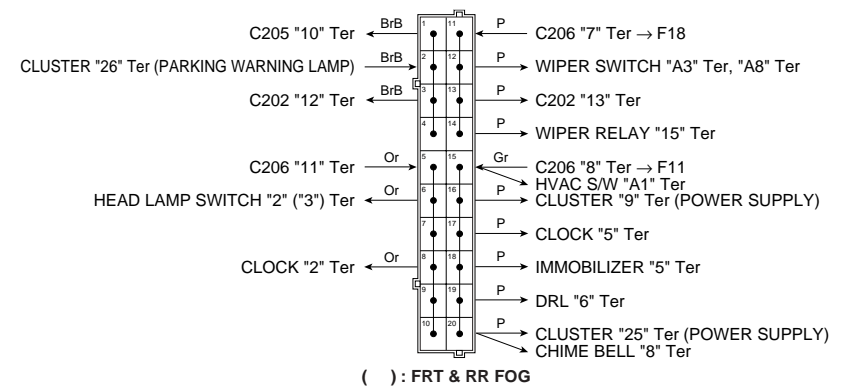

2. ECM(ENGINE CONTROL MODULE) : IEFI-6








1) BATTERY POWER SUPPLY & GROUND, EI SYSTEM, CKP CIRCUIT - IEFI-6

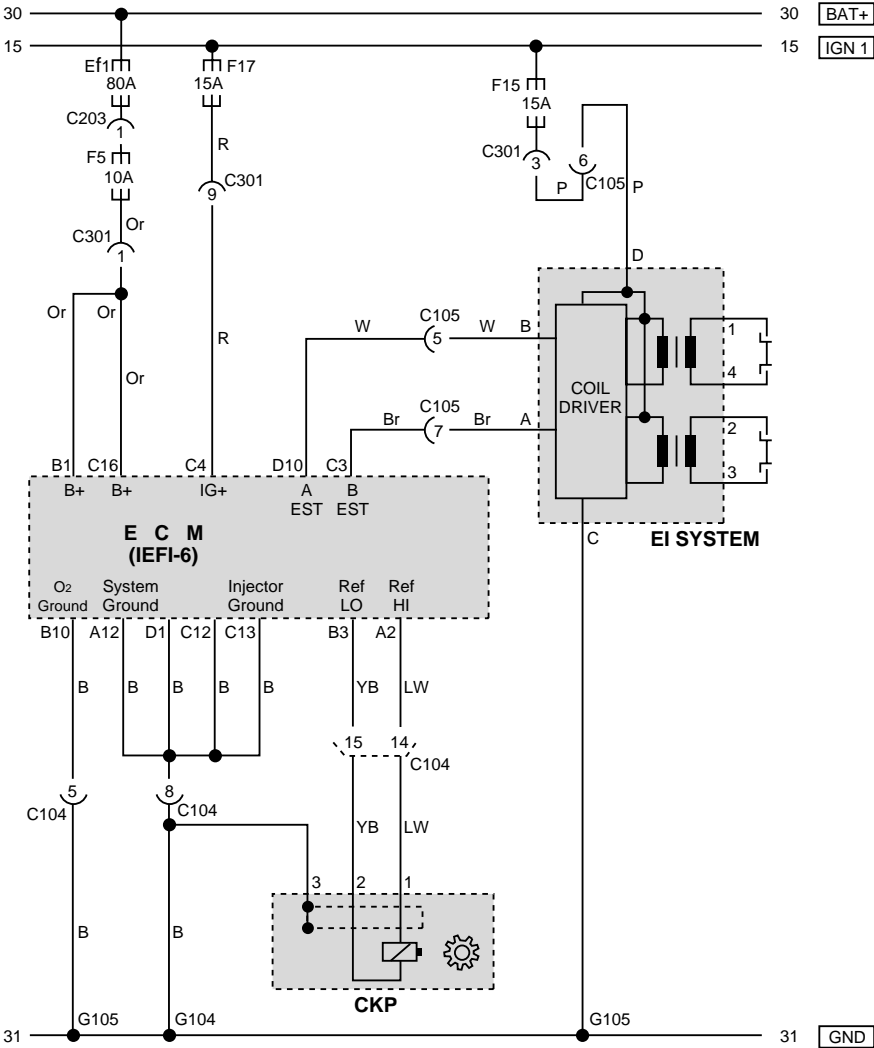

a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing

    b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

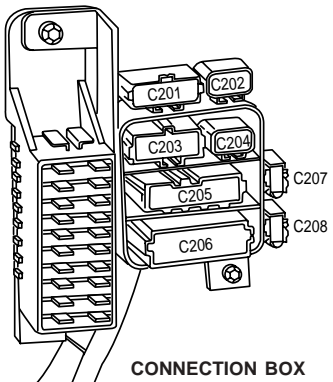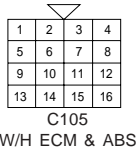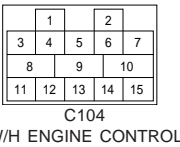


## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

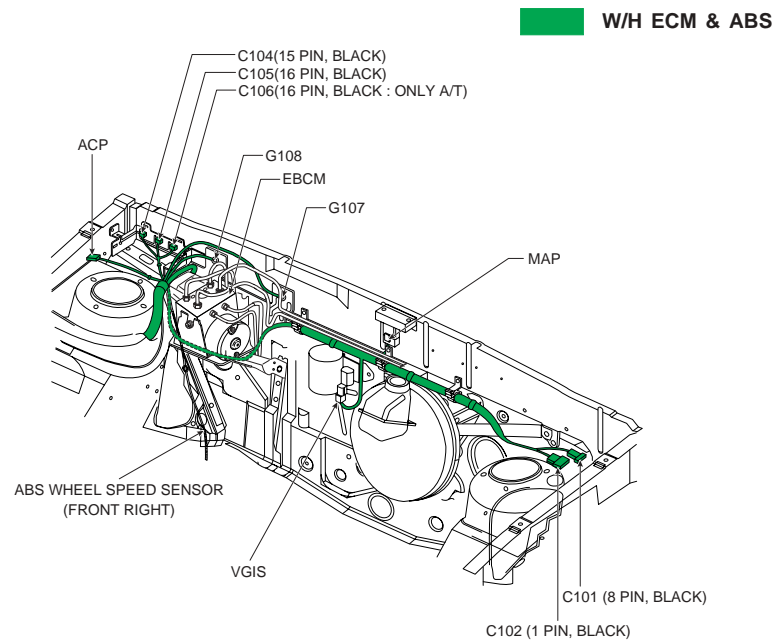

## • PASSENGER ROOM RIGHT SIDE PANEL

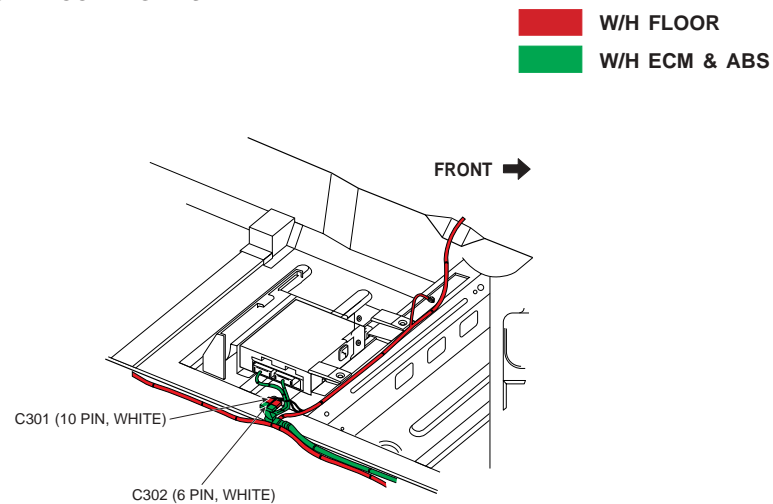


## • DOHC ENGINE

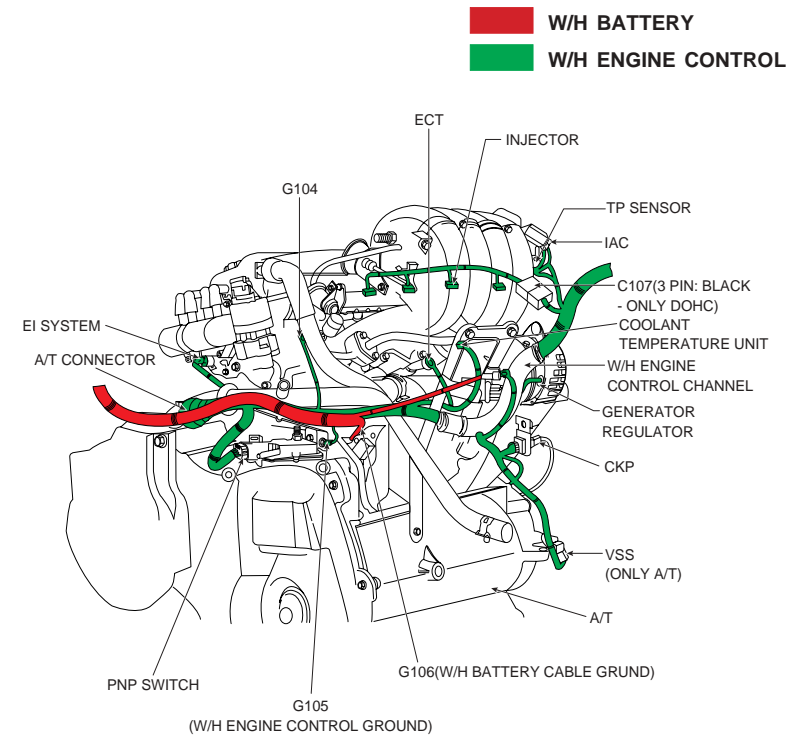

5-12 ELECTRICAL WIRING DIAGRAMS


2) FUEL PUMP, INJECTOR, O2 SENSOR CIRCUIT - IEFI-6  
2-1) W/AIR CONDITIONER (UNLEADED) - LHD

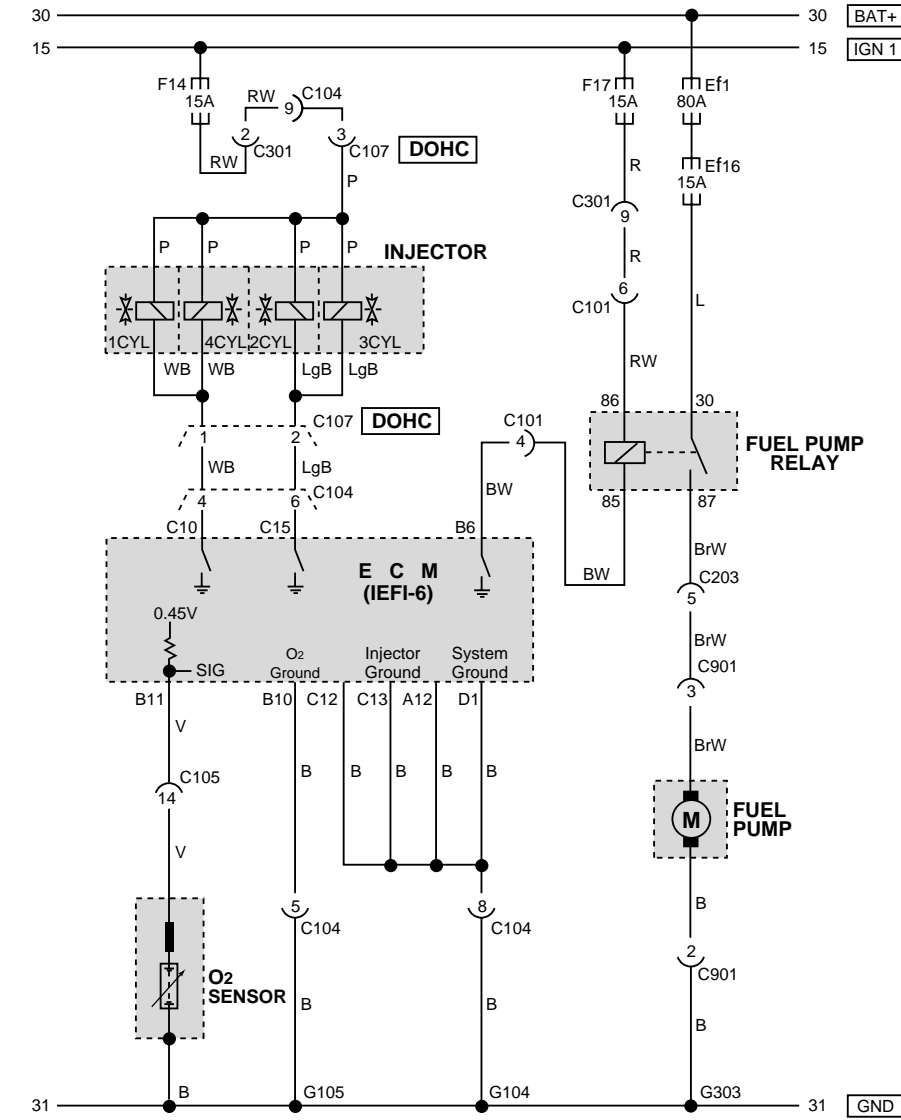

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(6PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

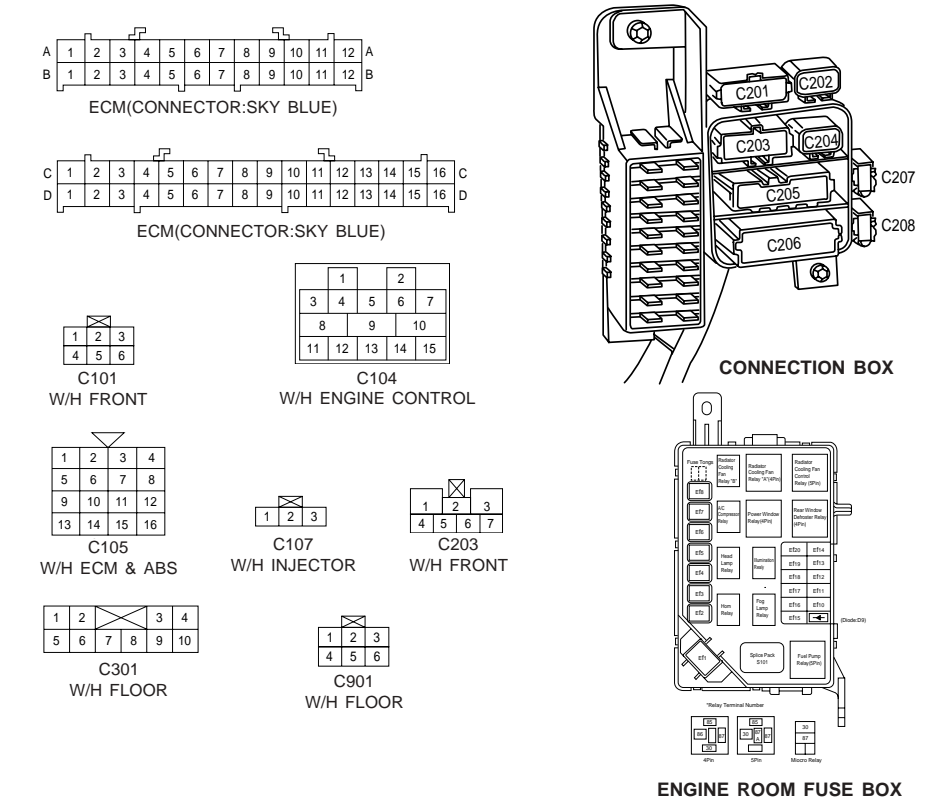


## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

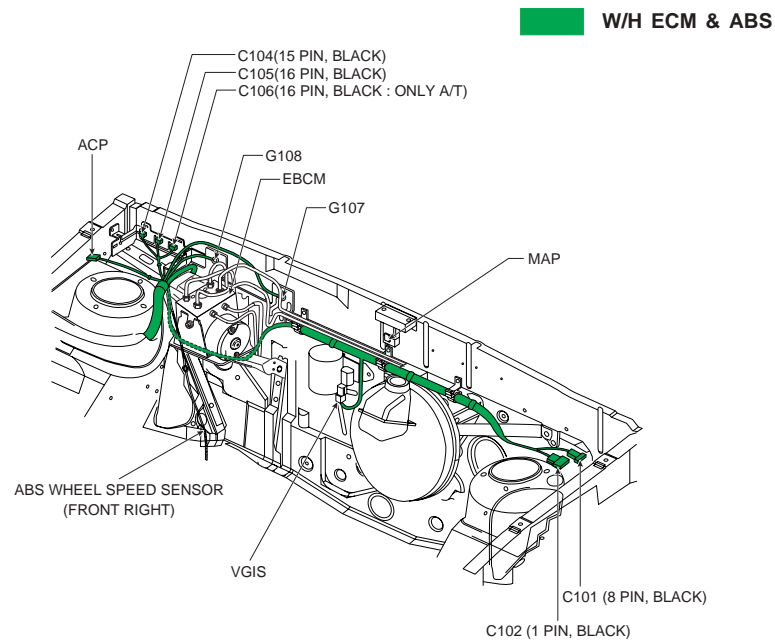


## • PASSENGER ROOM RIGHT SIDE PANEL

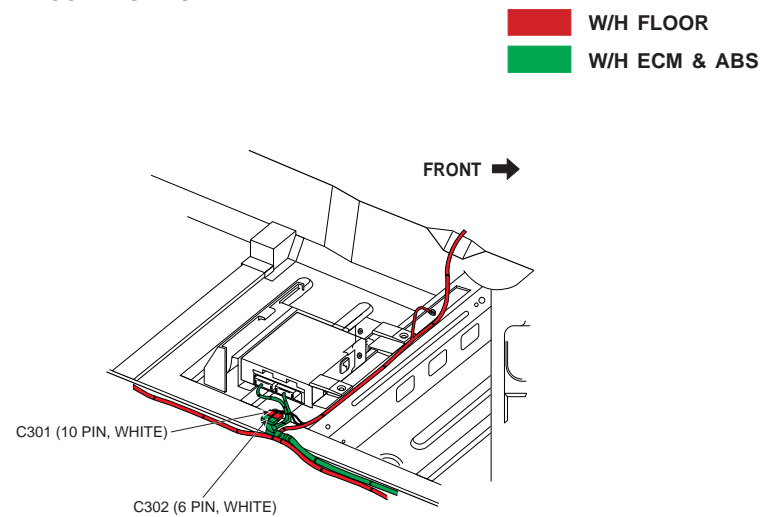


## • UNDER BODY

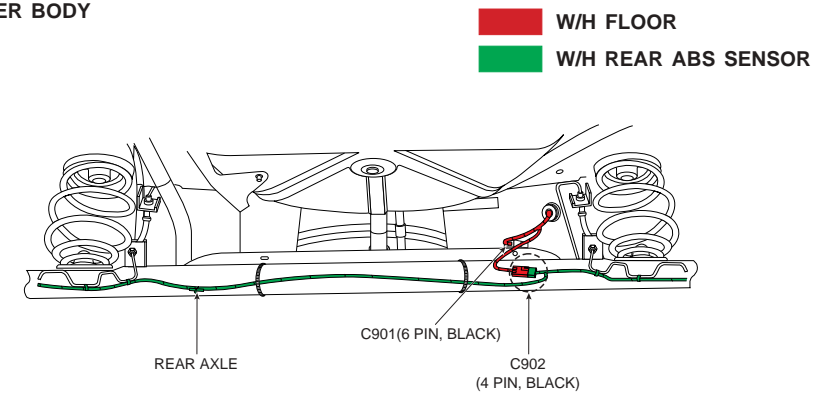

## • DOHC ENGINE

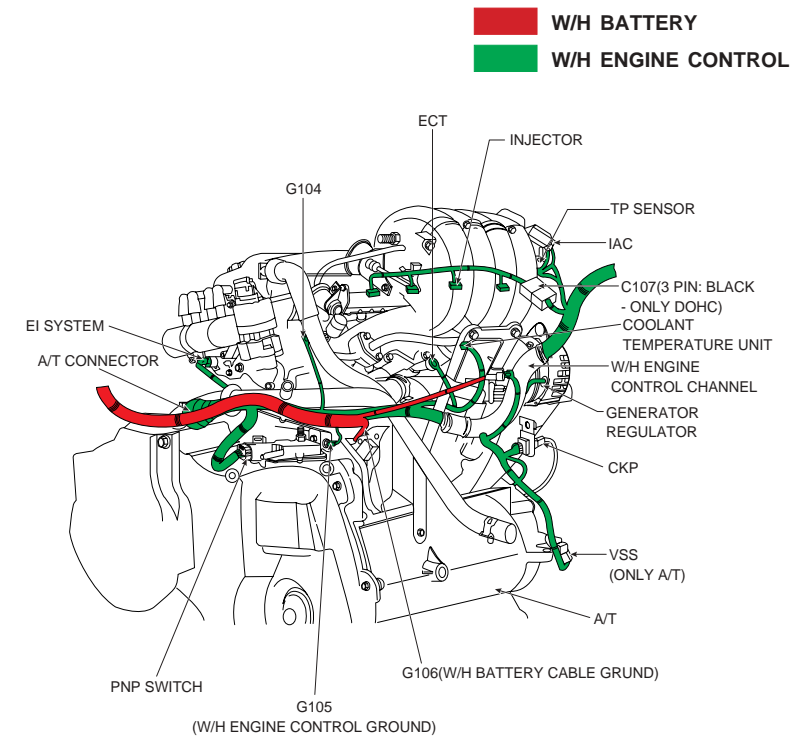


2-2) W/O AIR CONDITIONER (UNLEADED) - LHD

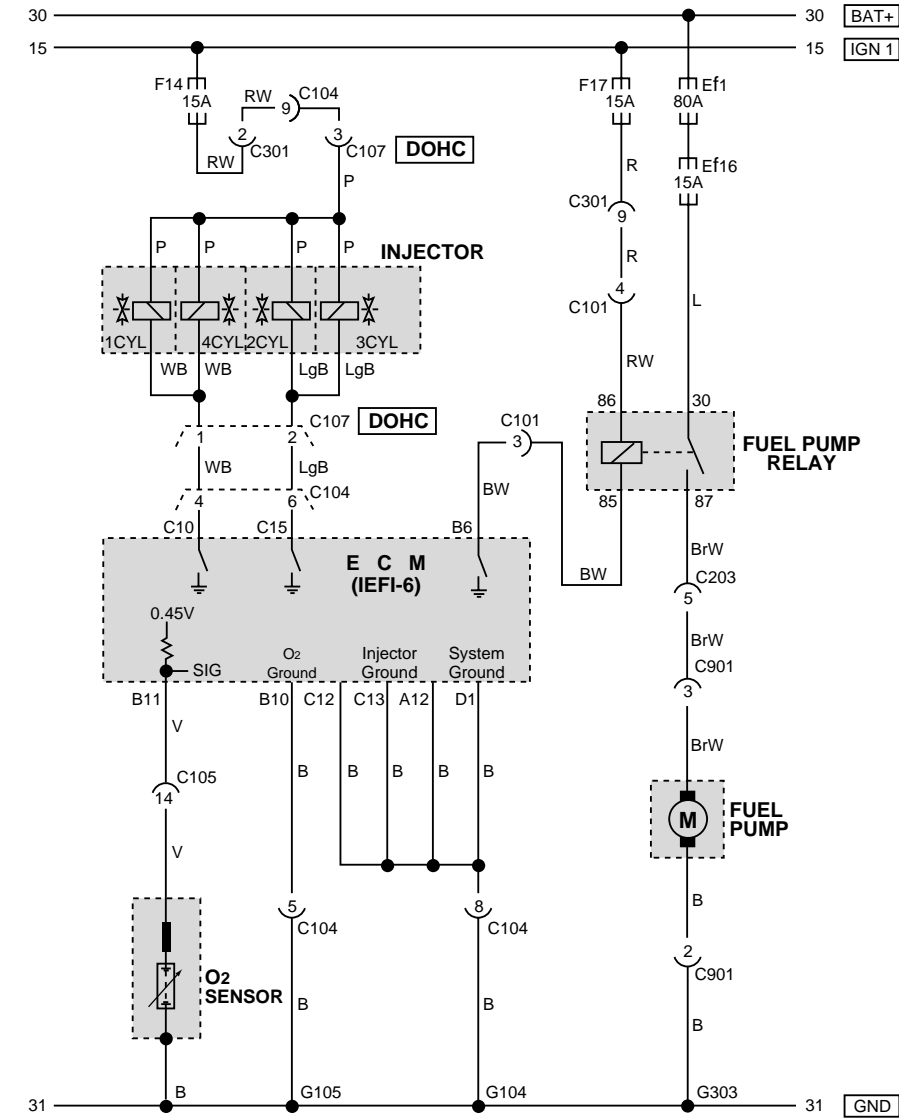

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(4PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

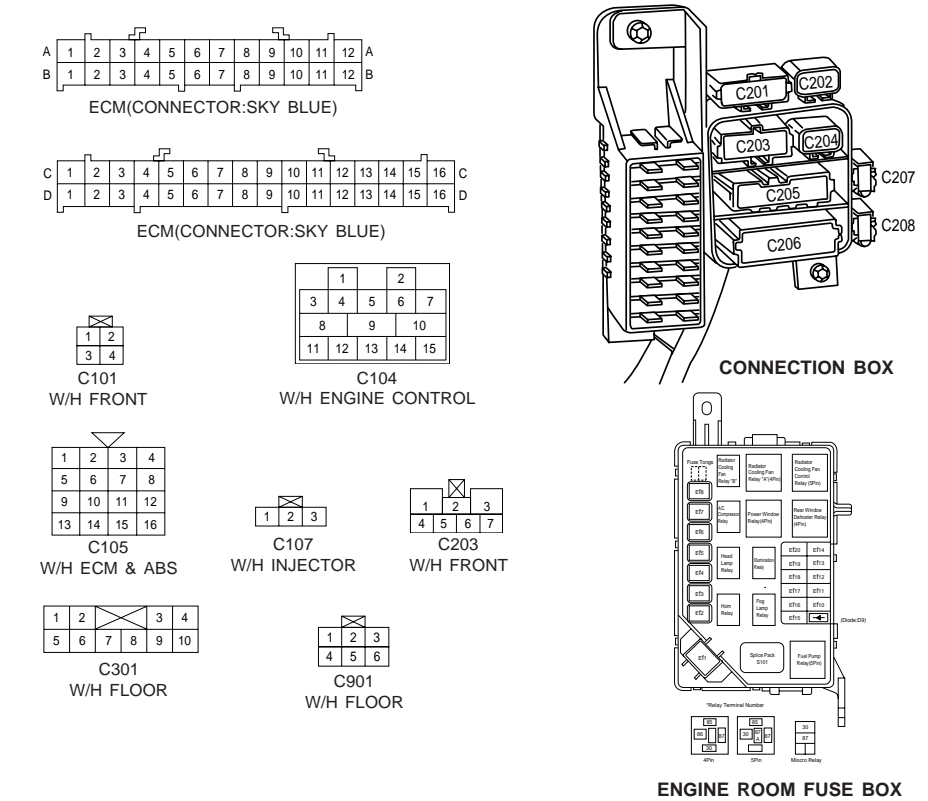




## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

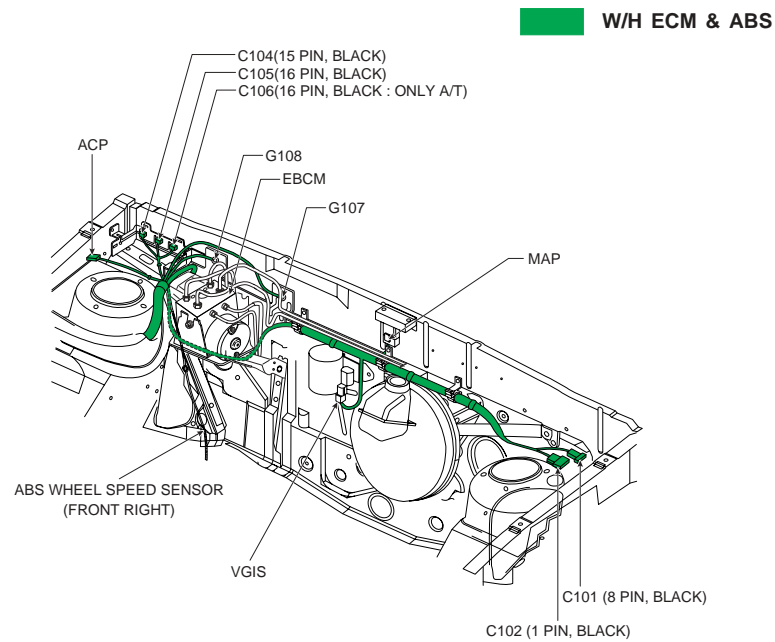


## • PASSENGER ROOM RIGHT SIDE PANEL

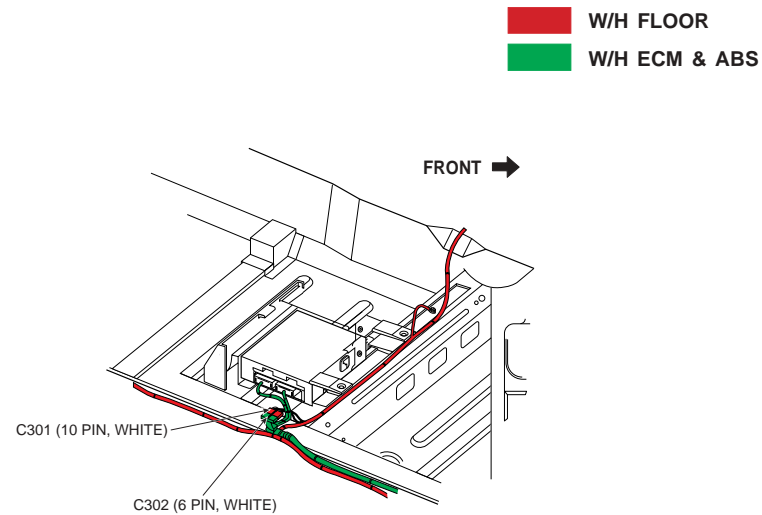

## • UNDER BODY

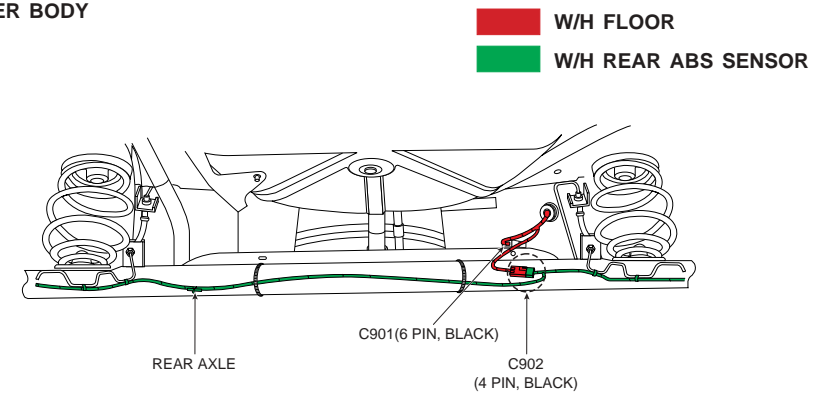


## • DOHC ENGINE

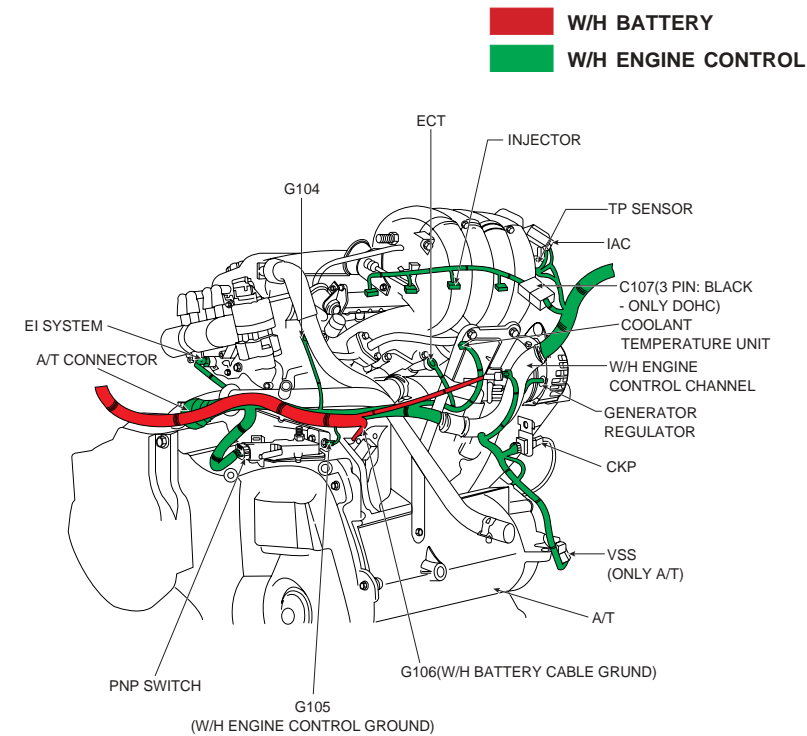






2-3) RHD (UNLEADED)

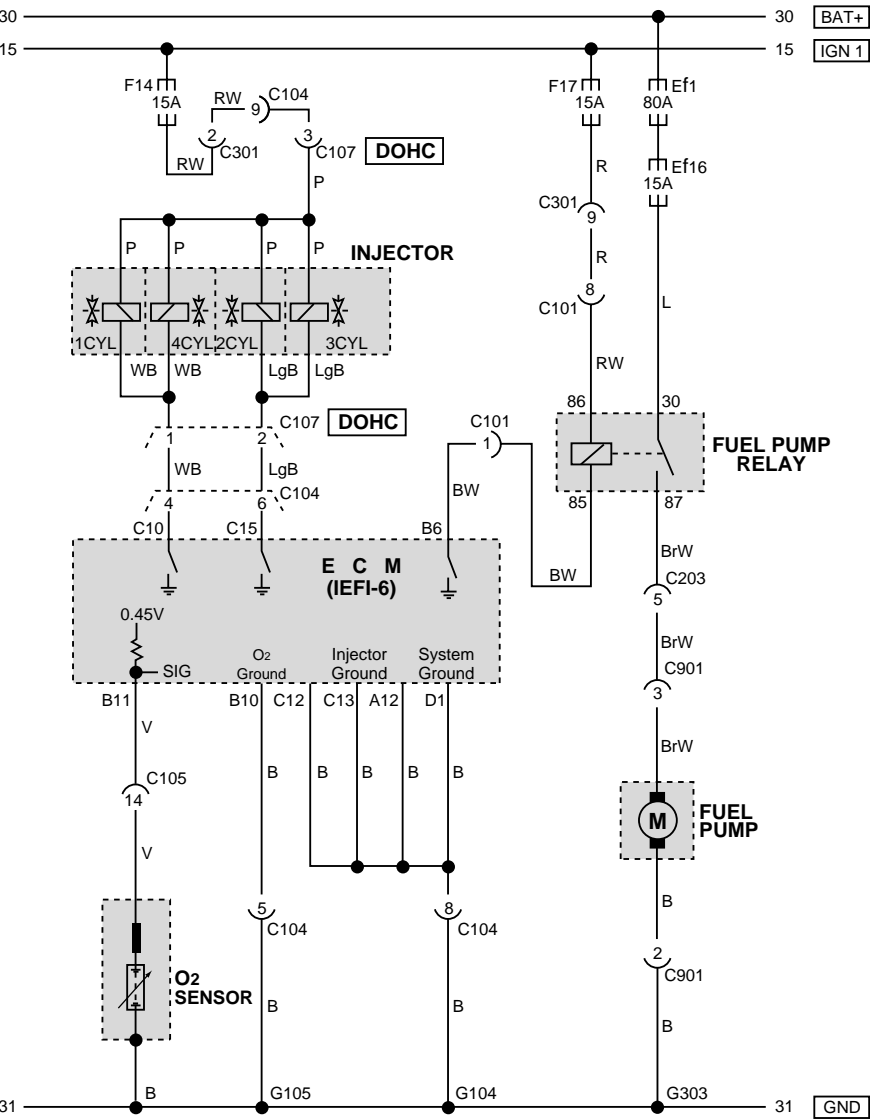

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(4PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

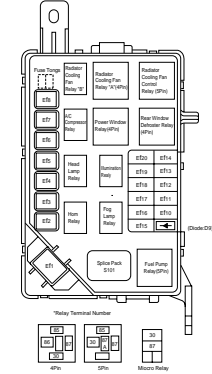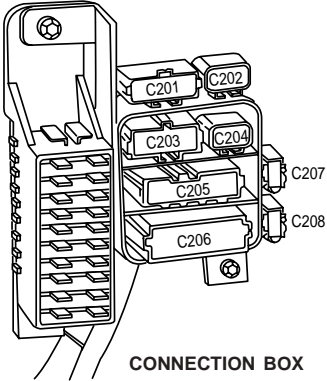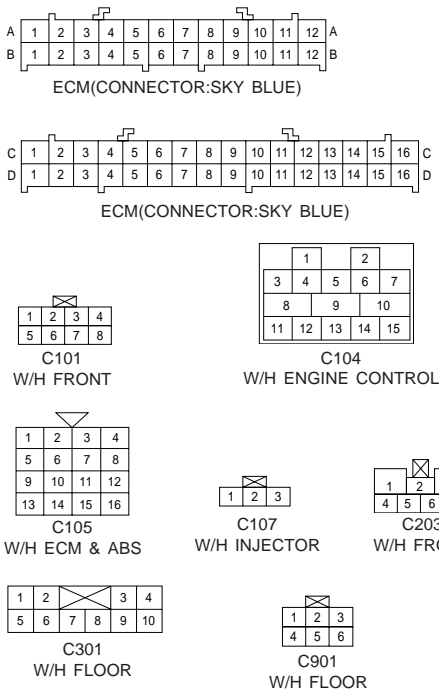


ENGINE ROOM FUSE BOX

## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

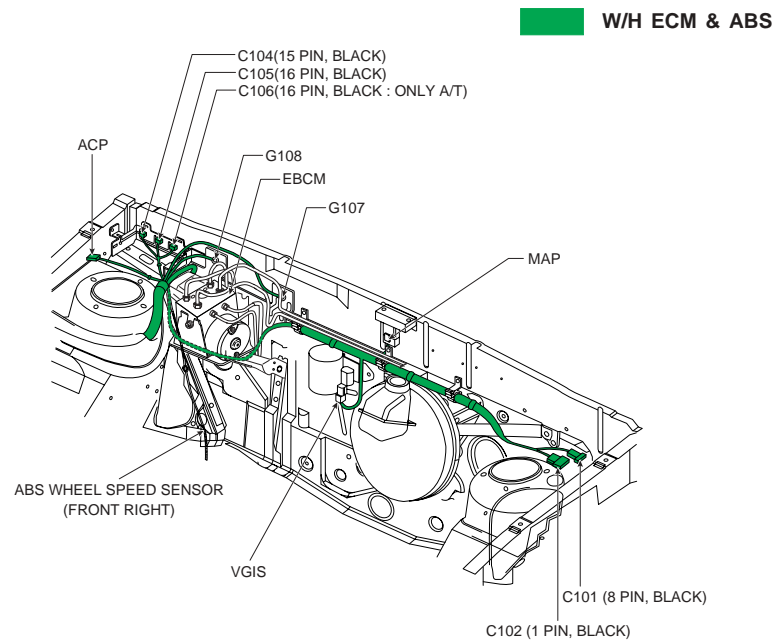

## • PASSENGER ROOM RIGHT SIDE PANEL

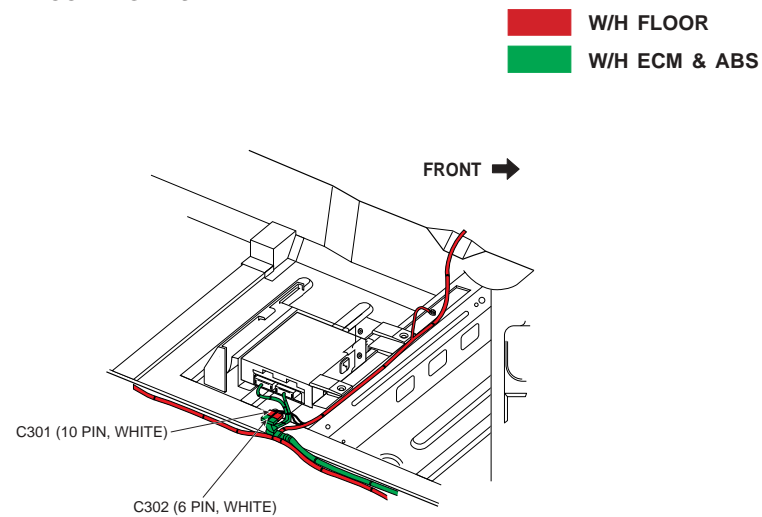

## • UNDER BODY

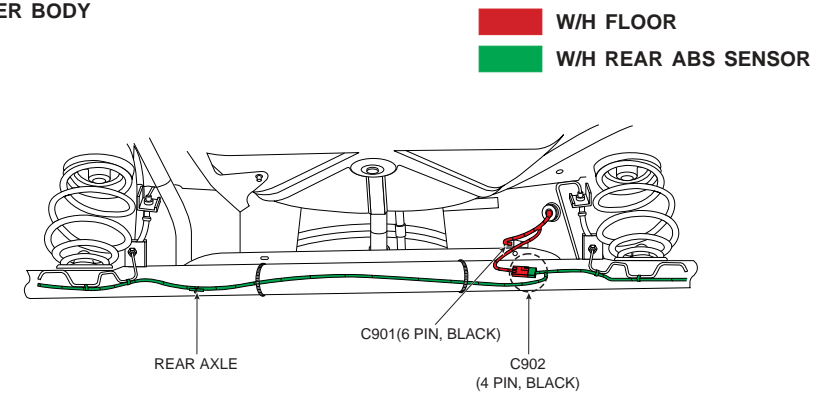

## • DOHC ENGINE

