



LOCATION:- LOWER I/P UNDER STEERING COLUMN

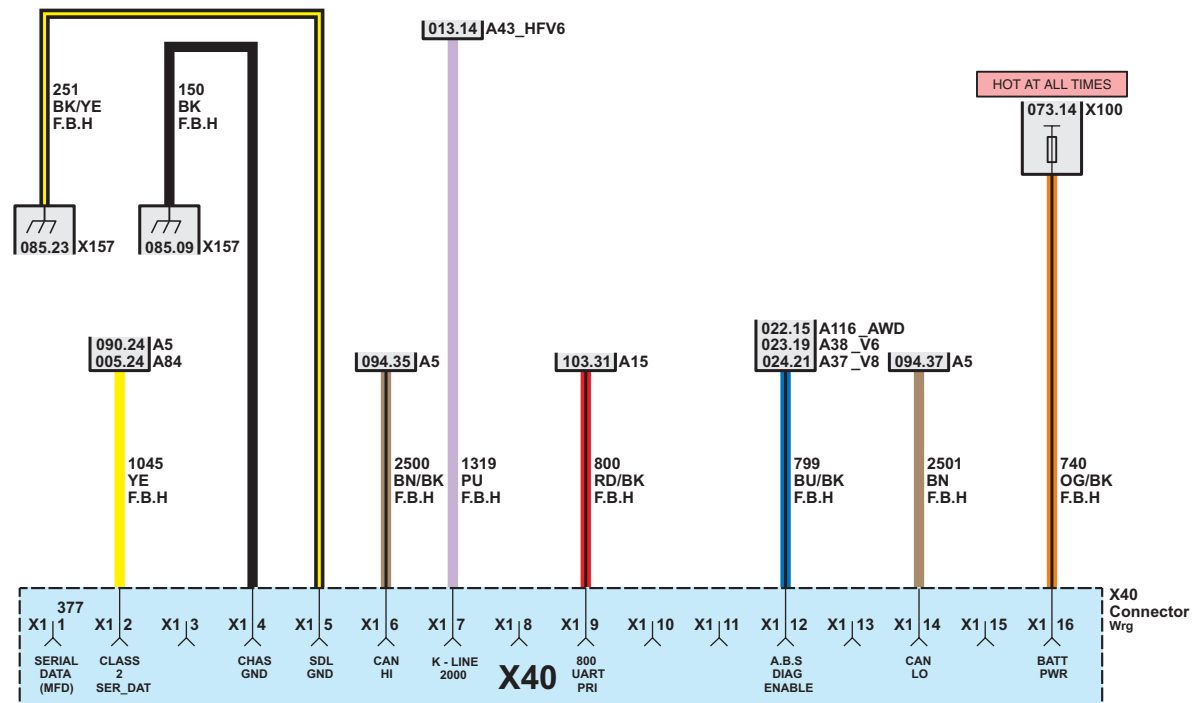

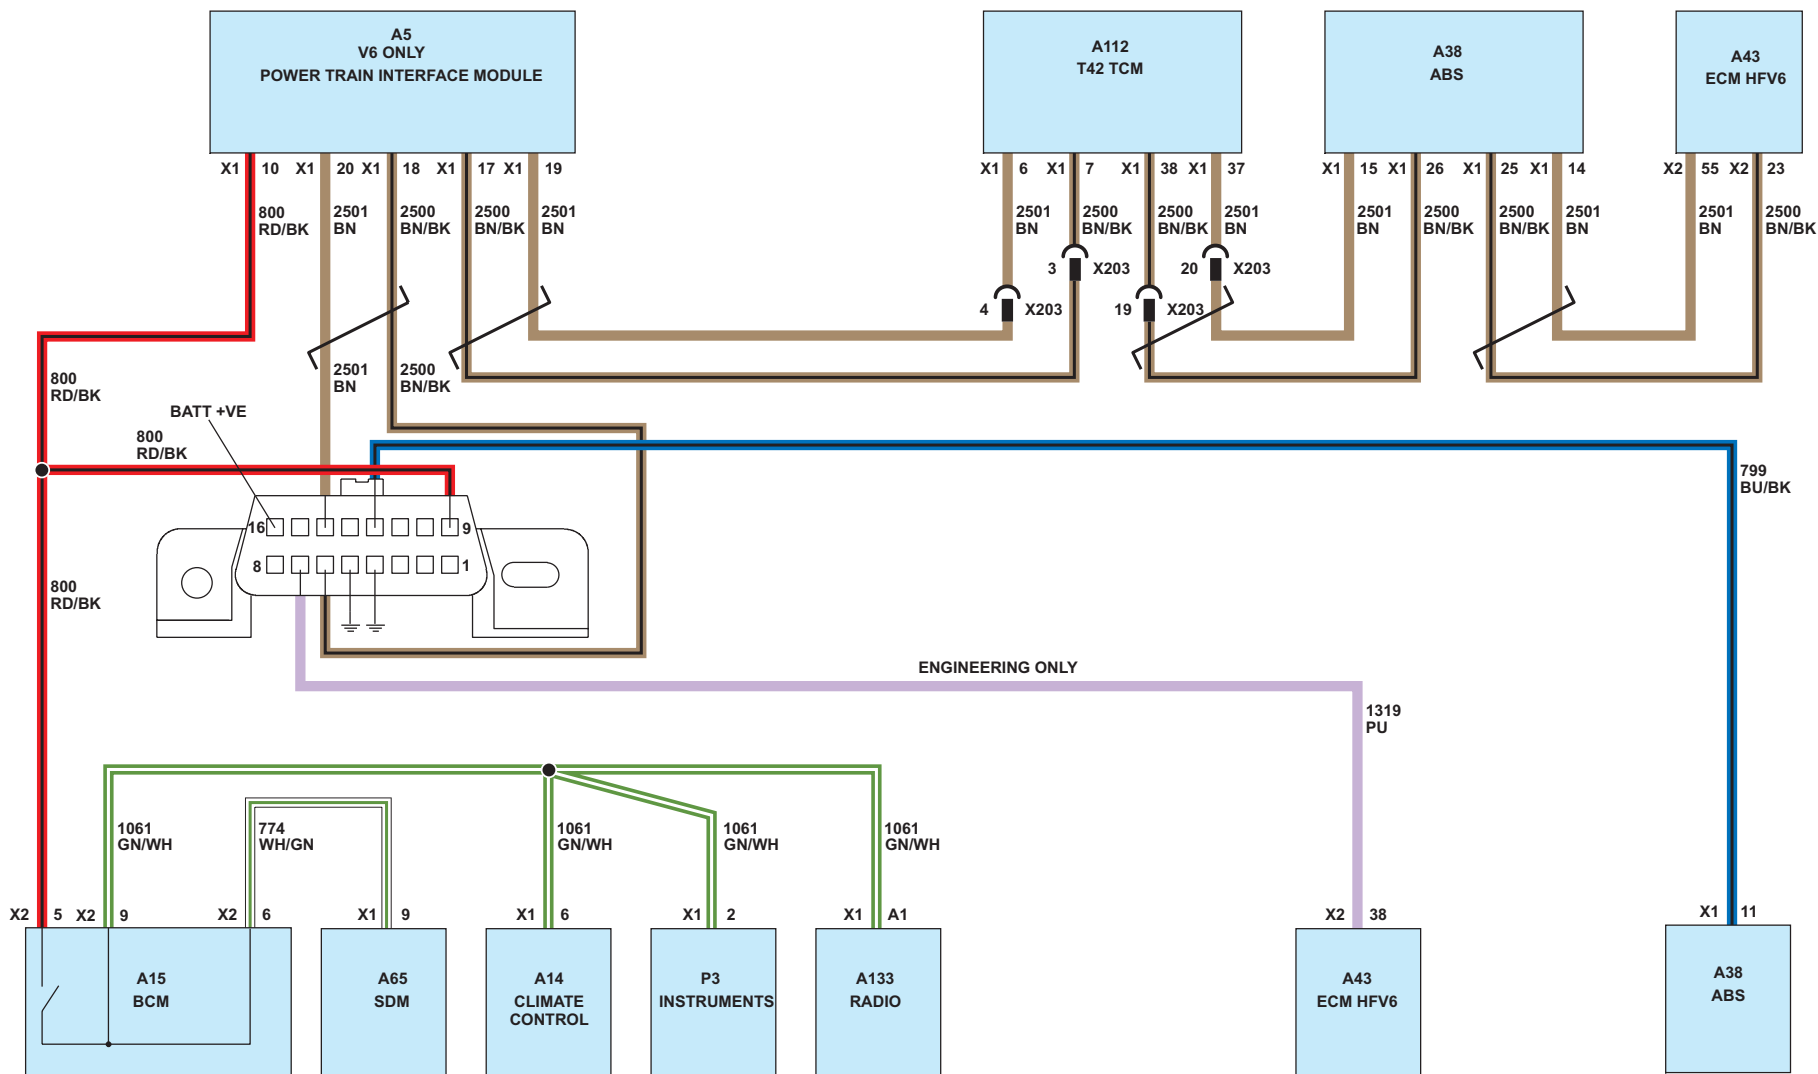

Sheet
092 of 104

