 
 
 

 
 
 
 

 

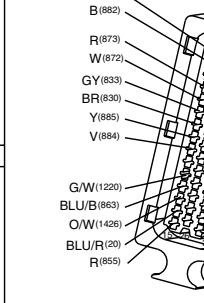

 
 




 


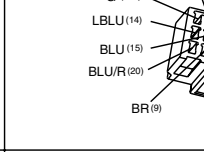
 
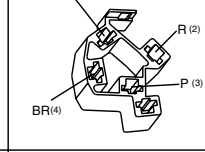


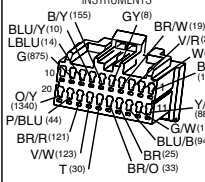
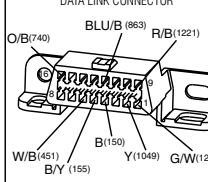
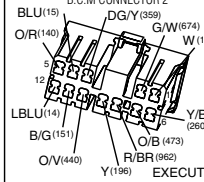
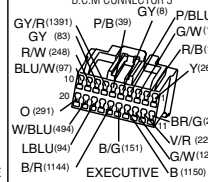
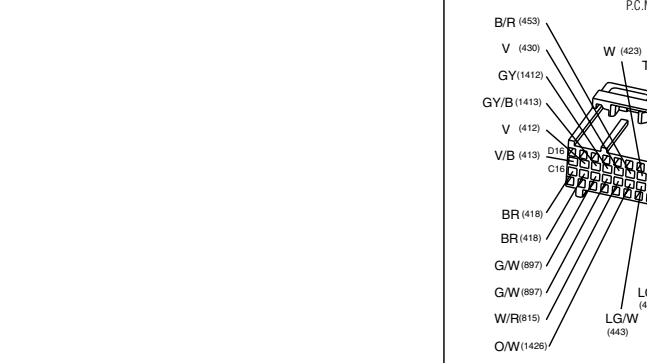
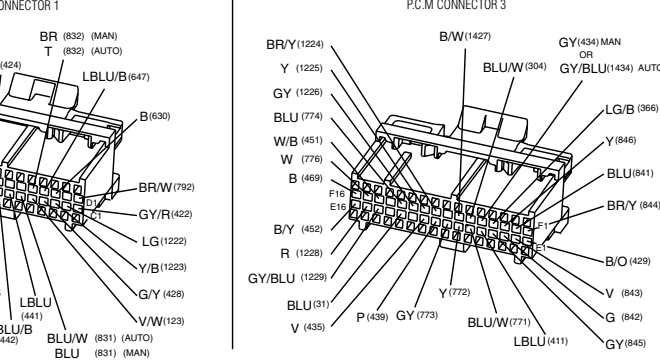
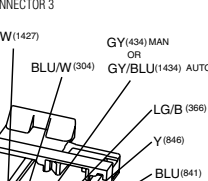


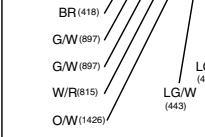


YE22 (POWER TRAIN HARNESS) INJECTORS 	YE34 (POWER TRAIN HARNESS) CRANK SENSOR 	YE36 (POWER TRAIN HARNESS) IDLE AIR CONTROL VALVE 	YE39 (M.W.H) E.F.I RELAY 	YE43 (M.W.H) ENGINE COOLING FAN RELAY (HIGH SPEED) 	YE57 (POWER TRAIN HARNESS) DIRECT IGNITION MODULE 	YE63 (POWER TRAIN HARNESS) CAM SENSOR 	YE96 (M.W.H) FUEL PUMP RELAY 		
YE99 (POWER TRAIN HARNESS) CANNISTER PURGE 		YE101 (M.W.H) A/C RELAY 	YE103 (M.W.H) ENGINE COOLING FAN RELAY (LOW SPEED) 	YE98 (M.W.H) A.B.S & T.C.S MODULATOR AND CONTROL MODULE 		YE104 (M.W.H) ENGINE COOLING FAN CONNECTOR 	YE105 (POWER TRAIN HARNESS) A/C COMPRESSOR 	YE110 (M.W.H) ENGINE CONNECTOR 1 	
		YE111 (M.W.H) ENGINE CONNECTOR 2 	YE112 (M.W.H) ENGINE CONNECTOR 3 			YE114 (M.W.H) LOCATION E3 EARTH CONNECTOR 	YE115 (POWER TRAIN HARNESS) S/C BOOST CONTROL SOLENOID 	YE118 (BATTERY HARNESS) ENGINE COOLING FAN HARNESS 	
YE119 (ENGINE COOLING FAN HARNESS) ENGINE COOLING FAN 		YE120 (POWER TRAIN HARNESS) A/C COMPRESSOR SUPPRESSION DIODE 		YB39 (M.W.H) BODY HARNESS CONNECTOR 		YB44 (M.W.H) IGNITION SWITCH 	YB74 (M.W.H) BODY HARNESS CONNECTOR 		
YB66 (M.W.H) INSTRUMENTS 	YB128 (M.W.H) DATA LINK CONNECTOR 		YB163 (M.W.H) B.C.M CONNECTOR 2 	YB164 (M.W.H) B.C.M CONNECTOR 3 	YB174 (M.W.H) B.C.M CONNECTOR 2 	YB175 (M.W.H) B.C.M CONNECTOR 3 			
YB193 (POWER TRAIN HARNESS) P.C.M CONNECTOR 1 			YB194 (POWER TRAIN HARNESS) P.C.M CONNECTOR 3 			YB188 (POWER TRAIN HARNESS) P.C.M 2 CONNECTOR 			
			YR32 (BODY HARNESS) FUEL TANK HARNESS CONNECTOR 			YR44 (FUEL TANK HARNESS) FUEL TANK 	YR45 (BODY HARNESS) FUEL CONTROL MODULE 		
NOTE:- CONVENTIONAL CURRENT FLOW IS ASSUMED IE. FLOWING FROM BATTERY +VE TO BATTERY -VE									

NOTE:- CONVENTIONAL CURRENT FLOW IS ASSUMED IE.
FLOWING FROM BATTERY +VE TO BATTERY -VE

YE101 YE13 YE99 YE115 CONNECTOR B.C.M. CONNECTOR (2)

