



NOTE:- CONVENTIONAL CURRENT FLOW IS ASSUMED IE. FLOWING FROM BATTERY +VE TO BATTERY -VE

**HARNESS SYMBOLS:** (M.W.H.) (BAT.) (P.T.) (B.) (E.C.)

**ENGINE COMPARTMENT:**

- YE39: EFT RELAY
- YE43: ENGINE COOLING FAN RELAY (HIGH SPEED)
- YE101: A/C RELAY
- FUSE 28, 29, 33, 34, 35
- YE103: FUEL PUMP ENGINE COOLING RELAY FAN RELAY (LOW SPEED)
- YE96: FUEL PUMP
- YE110: ENGINE CONNECTOR (1)
- YE111: ENGINE CONNECTOR (2)
- YE112: ENGINE CONNECTOR (3)
- YE120: A/C COMPRESSOR SUPPRESSION DIODE (DAVED) CONNECTOR
- YE98: A/B S & T.C.S. MODULATOR & CONTROL MODULE CONNECTOR
- YE114: LOCATION E3 EARTH CONNECTOR
- YE118: ENGINE COOLING FAN HARNESS CONNECTOR
- YE140: HIGH SPEED ENGINE COOLING FAN CONNECTOR
- YE139: LOW SPEED ENGINE COOLING FAN CONNECTOR
- YE105: DIRECT IGNITION MODULE CONNECTOR
- YE34: CRANK SENSOR CONNECTOR
- YE63: CAM SENSOR CONNECTOR
- YE57: DIRECT IGNITION MODULE CONNECTOR
- YE105: A/C COMPRESSOR CONNECTOR
- YE99: CANISTER PURGE CONNECTOR
- YE22(2): INJECTOR CONNECTOR
- YE22(4): INJECTOR CONNECTOR
- YE22(6): INJECTOR CONNECTOR
- YE22(5): INJECTOR CONNECTOR
- YE22(3): INJECTOR CONNECTOR
- YE22(1): INJECTOR CONNECTOR
- YE115: S/C BOOST CONTROL VALVE CONNECTOR
- YE36: IDLE AIR CONTROL VALVE CONNECTOR
- YE44: IGNITION SWITCH CONNECTOR
- YE128: OILWAVE CONNECTOR
- YE133: FUSE 13
- YE134: FUSE 14

**EXECUTIVE SHOWN**

**VIEW A: BERLINA & CALAIS SHOWN**

- YE66: INSTRUMENT CONNECTOR
- YE163: B.C.M. CONNECTOR (2)
- YE39: BODY HARNESS CONNECTOR
- YE164: B.C.M. CONNECTOR (3)
- YE74: B.C.M. CONNECTOR (3)
- YE174: B.C.M. CONNECTOR (2)
- YE39: BODY HARNESS CONNECTOR
- YE175: B.C.M. CONNECTOR (3)
- YE74: B.C.M. CONNECTOR (3)
- YE188: P.C.M. CONNECTOR (2)
- YE193: P.C.M. CONNECTOR (1)
- YE194: P.C.M. CONNECTOR (3)
- YE195: FUEL CONTROL MODULE CONNECTOR
- YE32: FUEL TANK HARNESS CONNECTOR
- YE44: FUEL TANK CONNECTOR

**VIEW B: BERLINA & CALAIS SHOWN**

**VIEW C: EXECUTIVE SHOWN**

**VIEW D: BERLINA, CALAIS, STATESMAN & CAPRICE SHOWN**

**EXECUTIVE SEDAN**