



WIRING DIAGRAM FOR INJECTION SYSTEM (GM)

1. Air temperature sensor
2. Idle speed adjuster
3. Electronic control unit (ECU)
4. Octane-rating potentiometer
5. Spark plugs

6. Ignition module
7. Crankshaft sensor
8. Fuel pump motor and fuel level sensor
9. Instrument cluster including tachometer and 'Check Engine' light
10. Main fuse box
11. Speed sensor
12. Diagnostic plug
13. Injector

14. Canister purge valve
15. Injection system fuse box
16. Ignition relay
17. Electric fuel pump 'on' relay
18. Intake manifold preheating relay
19. Intake manifold preheater
20. Intake manifold preheating fuse
21. Oxygen sensor
22. Coolant temperature sensor

23. Throttle position sensor
 24. Manifold absolute pressure (MAP) sensor
- A. To battery '+' terminal
B. To ignition switch '15' terminal