


Powertrain Control Module (PCM) C1

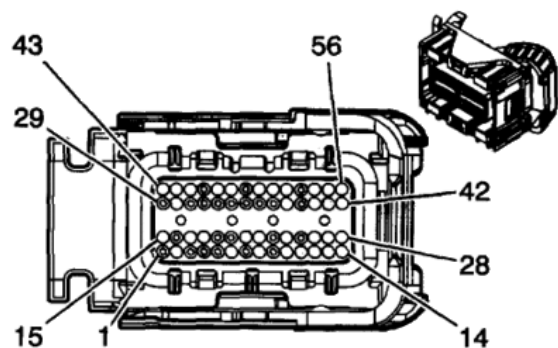


784851

Connector Part Information		<ul style="list-style-type: none"> 15357150 56-Way F Micro-Pack/064 Series (BU) 	
Pin	Wire Color	Circuit Number	Function

1-3	—	—	Not Used
4	GY	2700	5 Volt Reference
5	—	—	Not Used
6	BN/WH	419	MIL Control
7	BK	2751	Low Reference
8	BK	2759	Low Reference
9	—	—	Not Used
10	WH	1310	EVAP Canister Vent Solenoid Control
11-14	—	—	Not Used
15	D-GN	1049	Class 2 Serial Data
16-17	—	—	Not Used
18	BN	1141	Ignition 3 Voltage
19	PK	439	Ignition 1 Voltage
20	ON	540	Battery Positive Voltage
21	WH	121	Engine Speed Signal (JL4)
22	D-GN	389	Vehicle Speed Signal
23	YE/BK	625	Starter Enable Relay Control
24	BN	5069	Powertrain Relay
25	—	—	Not Used
26	D-GN	890	Fuel Tank Pressure Sensor Signal

Powertrain Control Module (PCM) C2

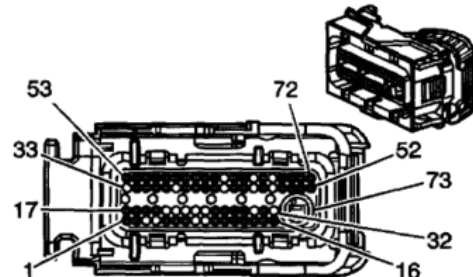


784850

Connector Part Information		<ul style="list-style-type: none"> 15357133 73-Way F Micro-Pack/064 Series (BK) 	
Pin	Wire Color	Circuit Number	Function

1	BN	1456	EGR Valve Position Signal
2	OG/BK	1061	UART Serial Data
3	TN	800	UART Serial Data
4	BK/WH	845	Fuel Injector 5 Control
5	BK	1744	Fuel Injector 1 Control
6	YE/BK	846	Fuel Injector 6 Control
7	PK/BK	1746	Fuel Injector 3 Control
8	BK	2753	Low Reference
9	L-GN/BK	1745	Fuel Injector 2 Control
10	L-BU/BK	844	Fuel Injector 4 Control
11	TN/BK	424	IC Timing Signal
12	BK/WH	3112	HO2S Heater Low Control Sensor 1
13	RD	1676	EGR Solenoid High Control
14-15	—	—	Not Used
16	GY	435	EGR Solenoid Low Control
17	GY	597	5 Volt Reference (L32)
18	L-GN	432	MAP Sensor Signal
19	—	—	Not Used
20	BK	476	Low Reference (L32)
21-23	—	—	Not Used
24	GY/BK	433	BARO Sensor Signal (L32)
25	—	—	Not Used
26	BK	630	Camshaft Position Signal
27	PU/WH	430	Low Resolution Engine Speed Signal
28	L-BU/BK	647	Medium Resolution Engine Speed Signal

Powertrain Control Module (PCM) C3

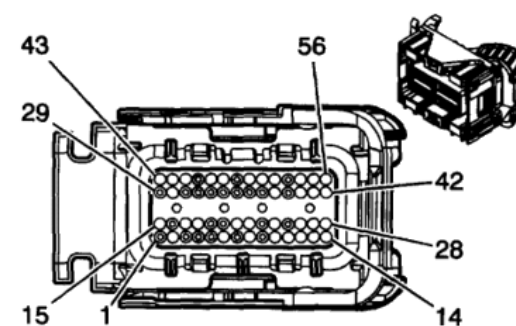

784851

Connector Part Information		<ul style="list-style-type: none"> 15357151 56-Way F Micro-Pack/064 Series (GY) 	
Pin	Wire Color	Circuit Number	Function

1-3	—	—	Not Used
4	TN/WH	3121	Oxygen Sensor Signal - Sensor 2 Low
5	YE/BK	1227	TFT Sensor Signal
6	YE	492	MAF Sensor Signal
7	—	—	Not Used
8	BK/WH	3122	HO2S Heater Low Control - Sensor 2
9-10	—	—	Not Used
11	RD/BK	1230	AT ISS High Signal
12	YE	400	OSS High Signal
13-14	—	—	Not Used
15	GY	773	Transmission Range Switch Signal C
16-18	—	—	Not Used
19	PU	3120	Oxygen Sensor Signal - Sensor 2 High
20	TN/BK	464	Delivered Torque Signal (L32)
21	—	—	Not Used
22	YE	772	Transmission Range Switch Signal B
23	WH	776	Transmission Range Switch Signal P
24	WH	1804	TCC Release Switch Signal
25	—	—	Not Used
26	TN	472	IAT Sensor Signal